

Safety Bracket Installation Instructions

To add Safety Brackets, reuse existing parts, and brackets provided by PSS.




1. Fold RoadQuake 2F TPRS to expose bottom surface.



2. Remove existing chain link parts. Parts shown above.



3. Discard 1 chain plate. Add Safety Bracket to remaining parts.

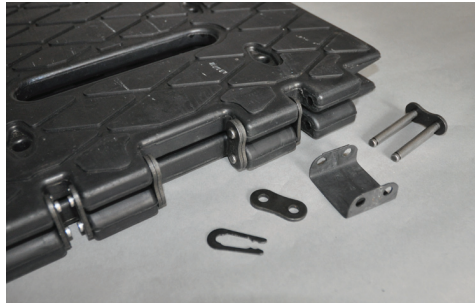

4. These are the 4 parts needed for each Safety Bracket installation.



5. Center the bracket over the holes.



6. Install link. Lubricate link with soap and water for easier installation.



7. Install outer chain plate.



8. Install locking clip. Repeat all steps as necessary.



Final installation of all 4 Safety Brackets should look like this.



Bottom side should look like this, flat and smooth.



Top side should also look flat and smooth.